
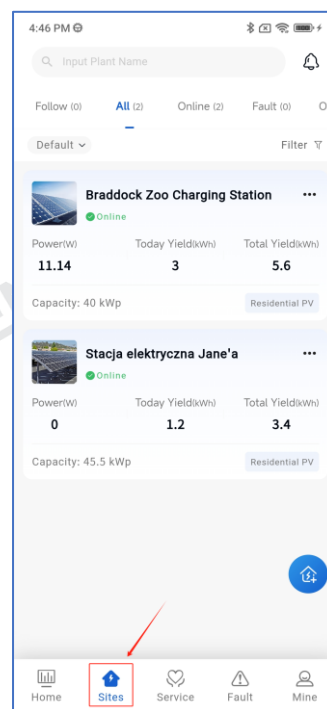


Equipment Parameter Settings


1. Login to the system

Open the Smart M app, enter your username and password to log in to the system, and select the "**Sites**" menu.

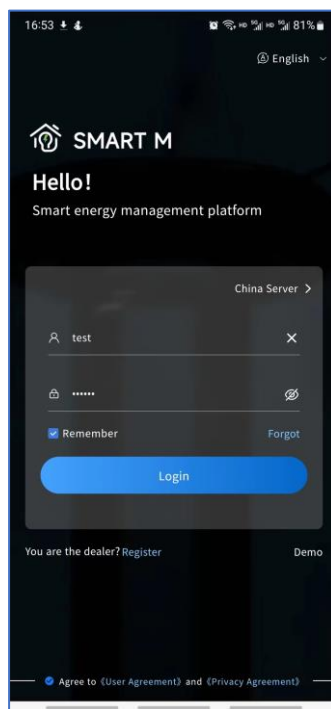

2. Parameter settings

Click on a power plant data, select the **"Device"** menu, then click on the button in the bottom right corner of the device data, and then click on the **"Parameter"** in the bottom pop-up window.

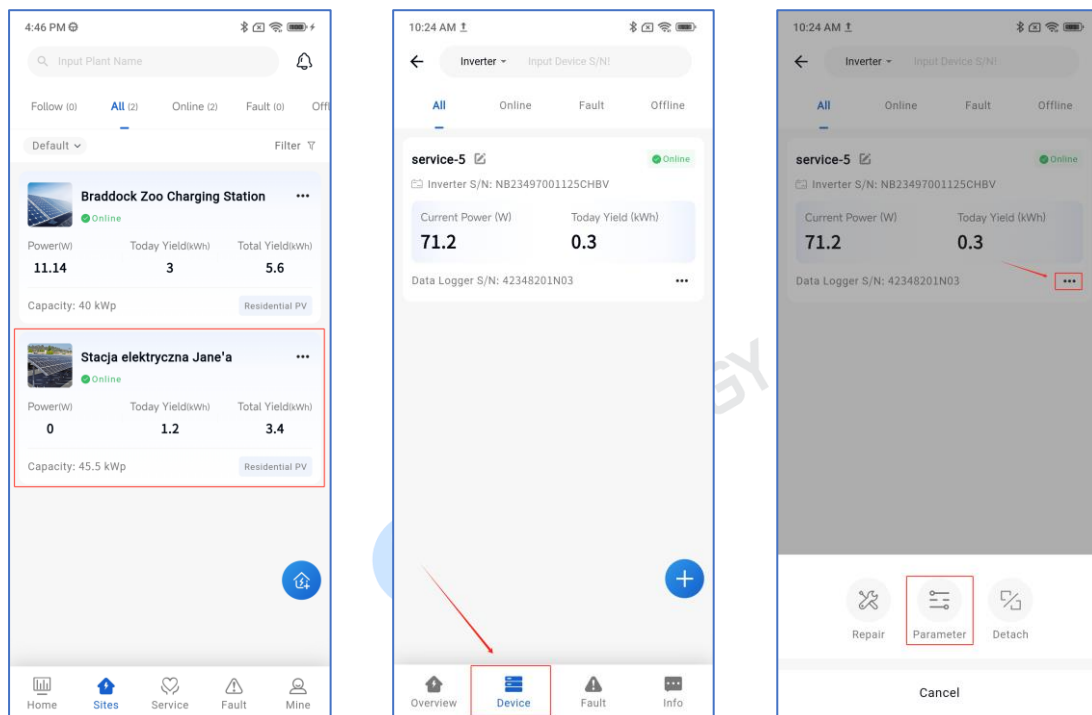

Select the parameter menu to be set in the Parameter page (such as "**Grid parameters**"), click "**Read**" to obtain the current parameters of the device, and after successful acquisition, modify the content to be set. Click "**Write**" to send the data to the device.

